

INSTALLATION INSTRUCTIONS

BOURGAULT MID-ROW BANDING SCRAPER



2110 Park Avenue Brandon, Manitoba, Canada R7B 0R9

Website: www.atomjet.com

Email: agriculture@atomjet.com

Phone: 1.204.728.8590

Fax: 1.204.726.5734

Toll Free: 1.800.573.5048

IMPORTANT WARRANTY/GUARANTEE INFORMATION

DO NOT DESTROY

Any claims under the guarantee must be **completed by October 31 in the year of purchase** to qualify for a full refund. To satisfy a claim, Atom-Jet Industries must be given the opportunity during the seeding season to rectify the problem or issue, if **not the guarantee is null and void**. Wear under normal use is not covered by warranty/guarantee.

Warranty is to be completed by October 31 in the year of purchase. Scraper will either be **replaced** or **repaired** during this period. If you need to return a scraper for warranty, please enclose your name, the farm name, address, phone number with area code, dealer purchased from, number of scrapers purchased, and the date of purchase. Please enclose copy of original invoice. Inclusion of the information will significantly speed up your warranty claim.

To activate your warranty, scan this QR code using the application on your mobile device and fill out the online form. Upon receipt of the completed form, we will send you a free pair of Atom-Jet work gloves.



Get a
GOOD START

" IF SEEDING  ISN'T DONE RIGHT, NOTHING ELSE MATTERS."

MRB Installation Instructions

BEFORE YOU START


Ensure your disks are in good working order. To function properly, the scraper needs to seal against the disk. Measure the disks to see if they are 17" in diameter or more. This is the smallest disk diameter at which the scraper can function properly. Check for scratches and deep gouges which may allow trash and debris to get between the scraper and the disk, leading to plugging and faster wearing of the scraper.

INSTALLATION


Here is a list of all the parts needed to install the scraper on the banding shank:

- Scraper
- Mounting Arm
- ¼" x 1" Roll pin
- Mounting bolt
- Rubber bushing and fitting
- Two #4 hose clamps
- One #6 hose clamp


First, assemble the scraper and mounting arm. Match the left mounting arms to left scrapers. The way to tell the difference between the left and right arms is shown by these pictures.

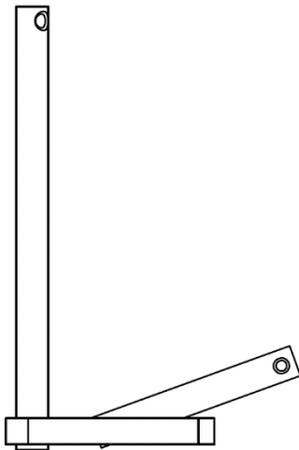



This is a right arm. The vertical shaft is the upper arm, and the angled shaft is the lower arm.

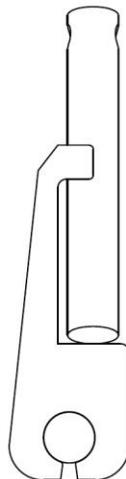



Viewed from the bottom, this is a right arm

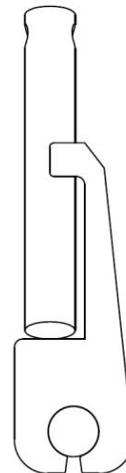

Viewed from the bottom, this is a left arm

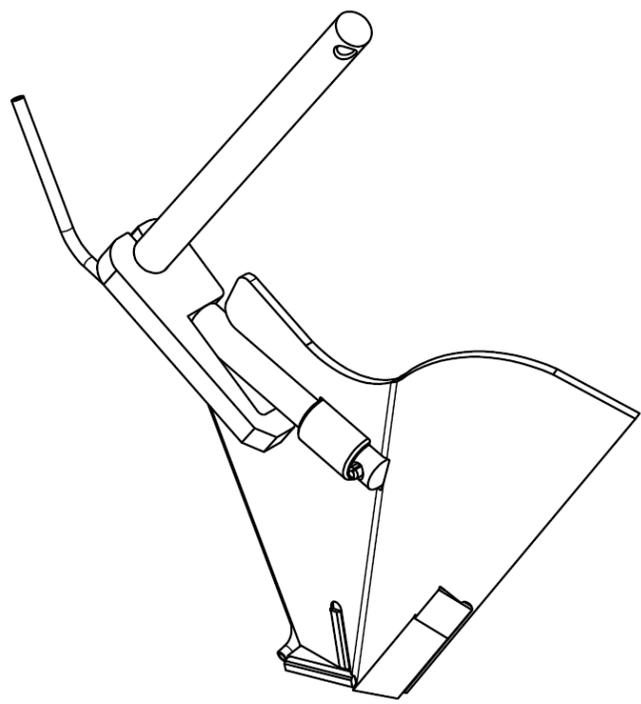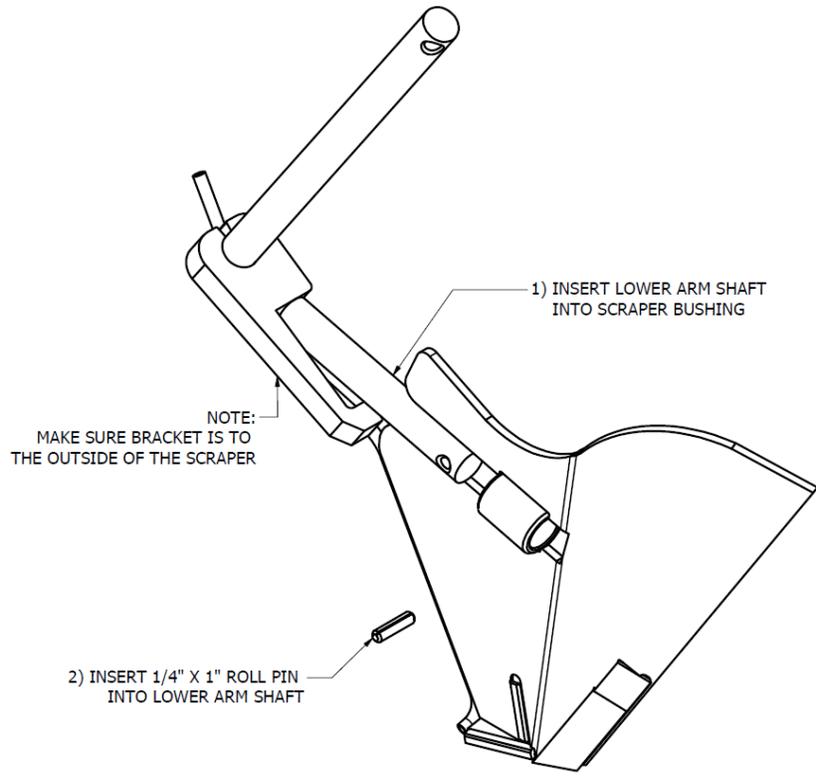

Next, install upper arm shaft in banding shank:

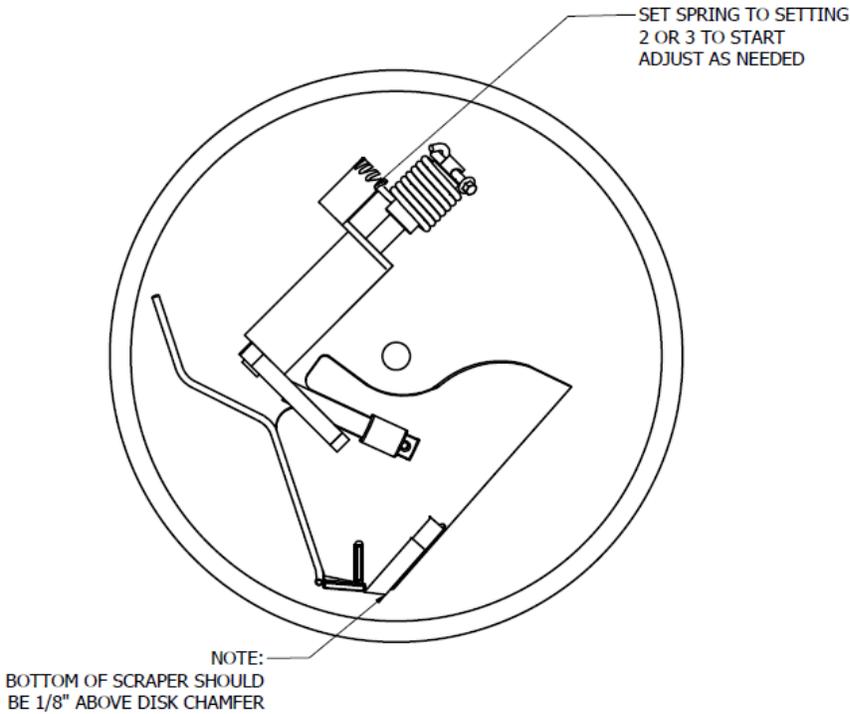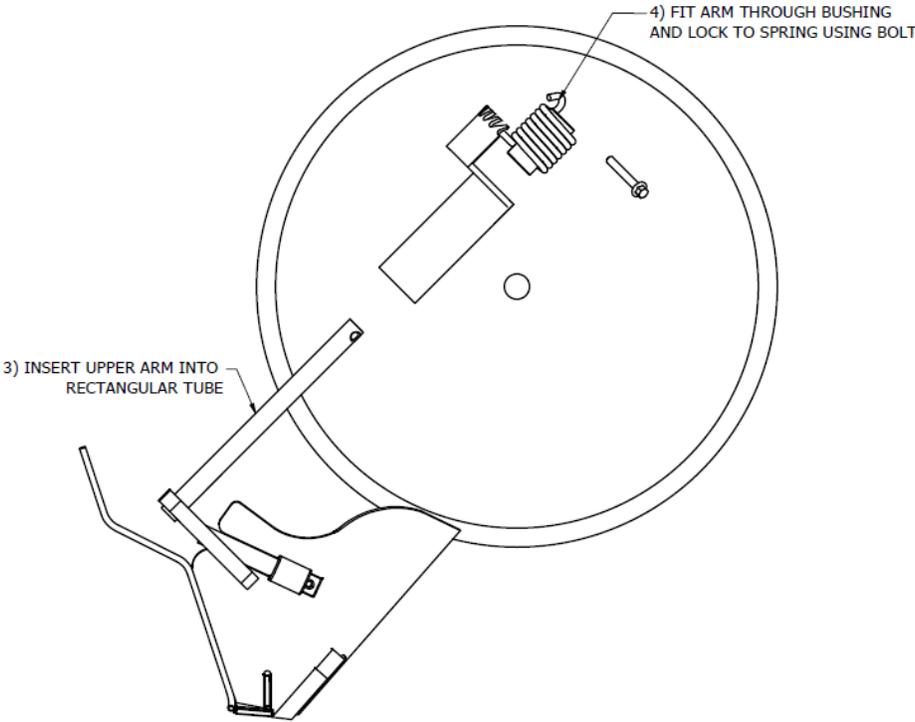

Finally, attach the fertilizer line to the scraper tube using rubber bushing, fitting, and hose clamps.