

# ***INSTALLATION INSTRUCTIONS***

**HOSE CONNECTION SETS FOR MID-ROW  
BANDING SCRAPERS**



**2110 Park Avenue Brandon, Manitoba, Canada R7B 0R9**

**Website: [www.atomjet.com](http://www.atomjet.com)**

**Email: [agriculture@atomjet.com](mailto:agriculture@atomjet.com)**

**Phone: 1.204.728.8590**

**Fax: 1.204.726.5734**

**Toll Free: 1.800.573.5048**

## FOR 3/8" OR 1/2" ID SUPPLY LINES

Start by warming up one end of the hose bushing with a heat gun, then push the warm end onto the scraper tube, past the flare. Secure it with a #4 hose clamp.

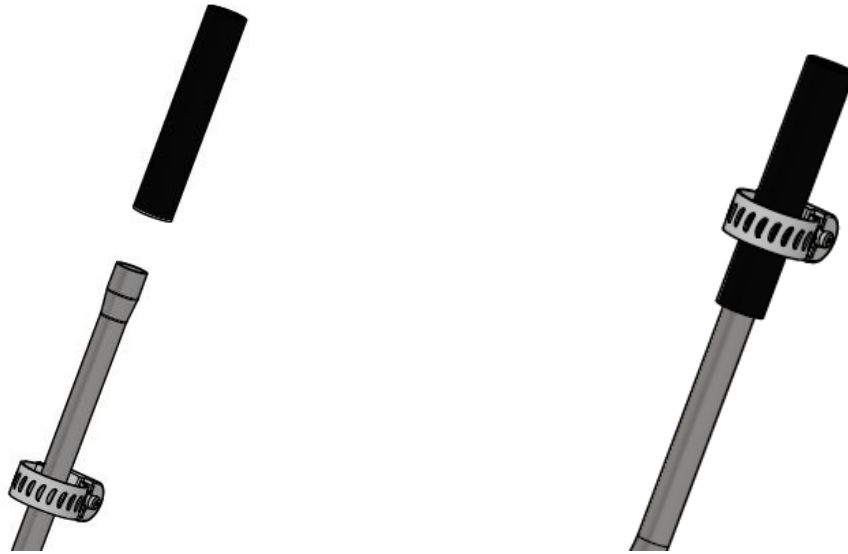


Figure 1: Install hose bushing.

Now, warm up the other end of the hose and install the barbed fitting, securing it with the other #4 hose clamp.

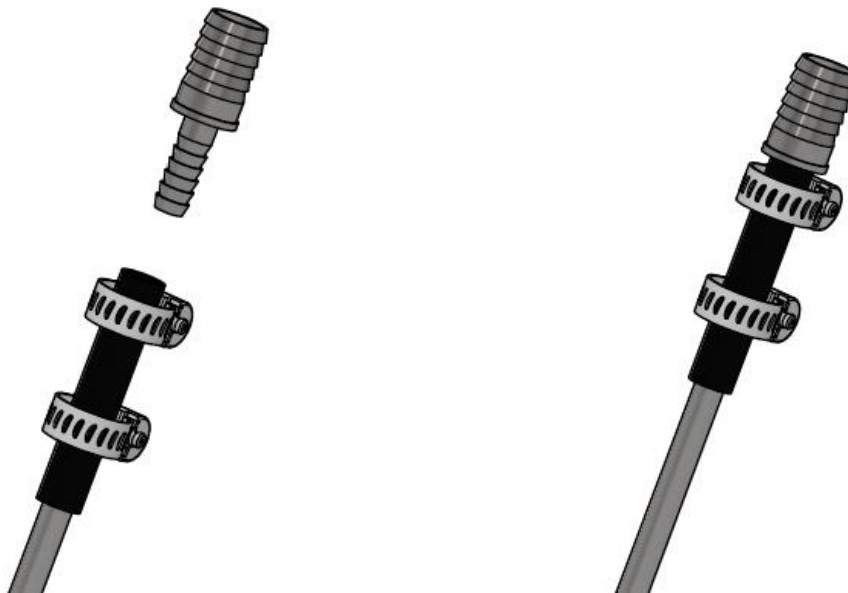


Figure 2: Install hose barb.

Finally, attach your supply line to the scraper.  $\frac{3}{8}$ " and  $\frac{1}{2}$ " lines will attach to the barbed fitting installed previously and secured with a #6 hose clamp.

### FOR $\frac{1}{4}$ " ID LINES

With  $\frac{1}{4}$ " ID lines, push your supply line directly onto the scraper line past the flared end and secure it with a #4 hose clamp.



Figure 3: Install supply line.

## FOR 1/4" OD SUPPLY LINE

To install the compression union, loosen the nut on one end and slide it over the scraper tube. Tighten the nut to seal the joint.

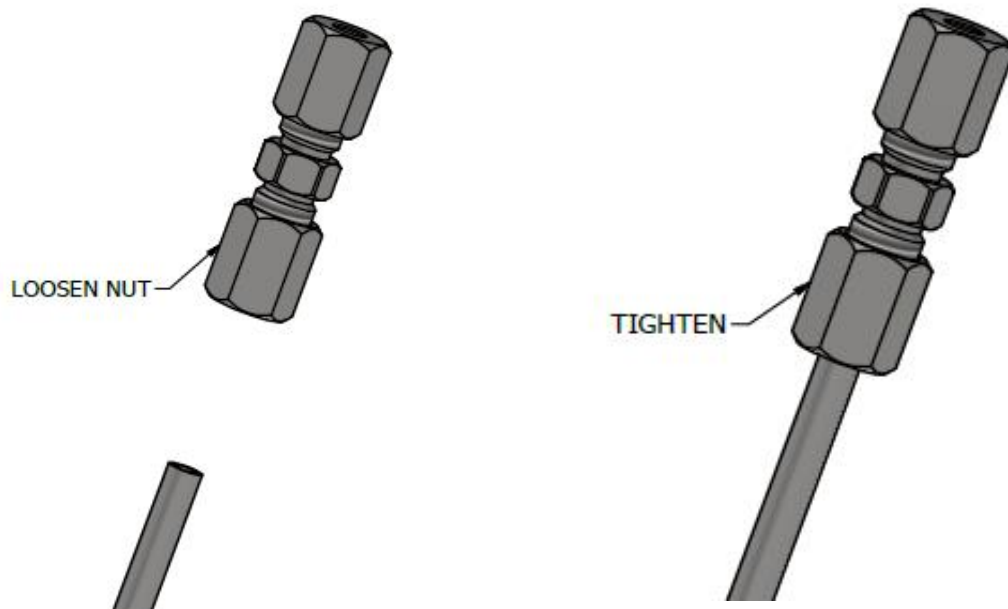


Figure 4: Install compression union.

Loosen the nut and push the line into the union. Tighten securely but be careful not to over-tighten as the supply hose may split.